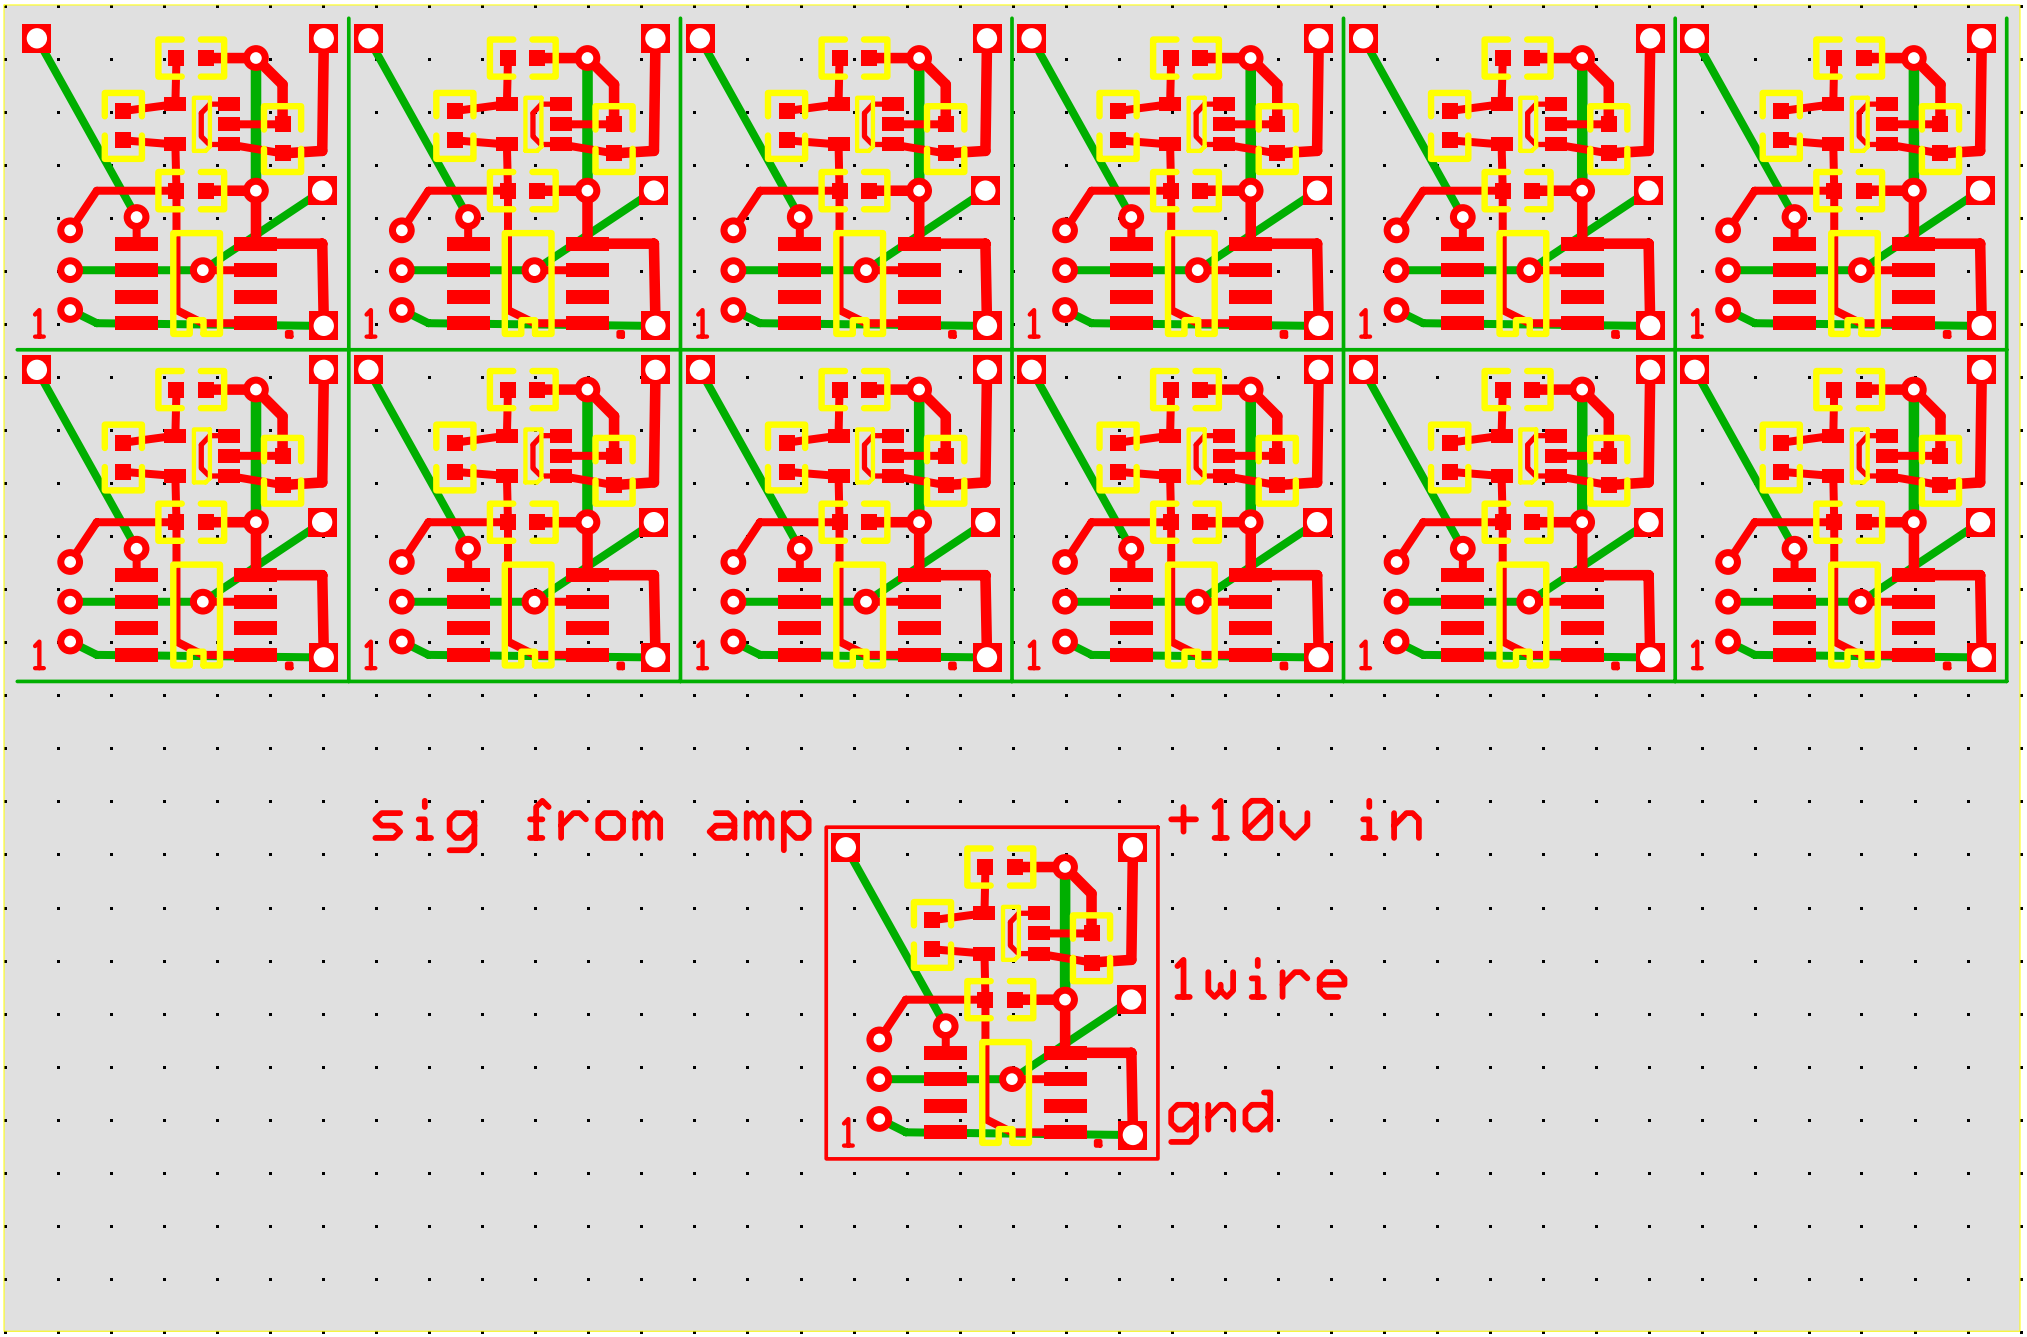

C:\Program Files\ExpressPCB\Kamland\1wire.pcb (Silkscreen, Top layer, Bottom layer)